




Congratulations on your purchase! We recognize the stress and annoyance of running out of battery power when you are on the go, so we created the power bank, a quick and easy way to stay connected and powered up no matter where you are. Featuring dual USB outputs, you can use power bank to charge your tablet, most smartphones, MP3 players, mini speakers and other digital devices.

With the user's own Apple cable or connector, it can also charge iPhone and iPad devices.

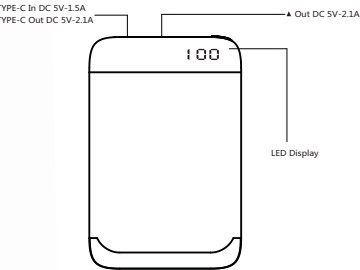

| | | |
|--|---|---|
| <p>Indicator</p> <ol style="list-style-type: none"> To check the power level, press the button once, the LCD screen will indicate the power status from 0 to 100 (0~100% full) Charging: LCD display is flashing with digits showing power bank current power level Discharging: LCD display is lighting with digits showing power bank current power level <p>Specifications:</p> <ul style="list-style-type: none"> Battery type: Polymer battery TYPE-C Input: DC5V –1500mA TYPE-C Output: DC5V –2100mA Output: DC5V –2100mA Total Output: DC5V –2100mA Capacity: 4000mAh Size: 99.5*62*12mm Weight: 124g Operating temperature: 10°C - 40°C (50°F-104°F) | <p>Charging the power bank</p> <p>Please note: Before using your power bank for the first time, please charge it to full (digits showing 100). This unit requires 3-4 full charges and drain cycles before the battery is optimized to its full potential. The unit should be recharged every 3 months when not in use.</p> <ul style="list-style-type: none"> * Insert the regular USB end into the output USB jack of computer or wall outlet adaptor. * Insert the Micro-USB end into the input port on the power bank. * The indicator is flashing showing it is charging. * The digits show 100 Once fully charged. <p>Charging your Devices</p> <p>Please note: Always check the voltage compatibility of your device before connecting to the power bank.</p> <ul style="list-style-type: none"> • Insert your device's regular USB charging cable into the output port of power bank. • Insert the other end into your electronic device. • Your device should indicate that charging has started. • The LCD digits are blue and decreasing one by one showing the power bank is discharging. • When you are finished with charging please remove the USB cable from the power bank. | <p>Safety Precautions</p> <p>Please note: Improper use may result in product damage, decreased battery life and loss of charging capacity not covered by the manufacturer's warranty.</p> <ul style="list-style-type: none"> • Check device voltage for compatibility before use • Only charge the unit from your computer or a certified approved power adaptor (certification depends on your region) • Do not store it in high or low temperature environments, small enclosed areas without ventilation or place in fire • Do not drop, bump, throw or shake the unit, this may damage internal components • Do not disassemble or try to repair or modify • Do not allow the unit to come in contact with water or moisture • If battery becomes excessively hot, emits odour, gets dented or experiences any abnormal deformity you should stop using it immediately. • Only dispose of battery at authorized recycling centre • Do not use harsh chemicals or cleaning agents on the exterior of this unit |
|--|---|---|